


LAMPCOZY.STORE

SUPPORT@LAMPCOZY.STORE

L I G H T I N G

Vk-VKW9-240801-WXH-260528-V1

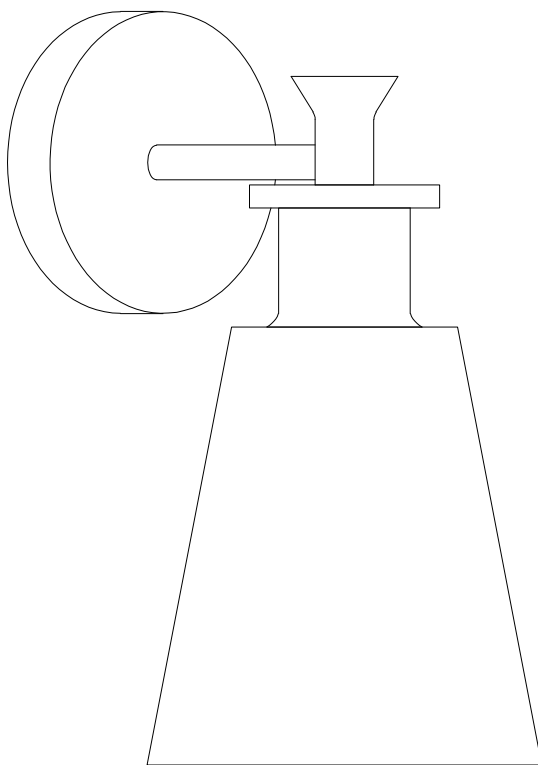

INSTALLATION INSTRUCTIONS

LAMPCOZY.STORE
SUPPORT@LAMPCOZY.STORE

CAUTION

Turn off the power to the main circuit panel before starting.

CAUTION

The light source for this product is a non-replaceable LED. Do not disassemble the product, as the LED may damage your eyes.

Do not immerse in water.



WARNINGS

Failure to follow assembly instructions may result in a fire or electric shock hazard.

CAUTION

Pulling the light fixture out of the surface may cause personal injury and damage to the fixture and/or the mounting surface. To reduce the likelihood of such injury or damage, install it only on surfaces with intact mechanical structures.



WARNINGS

Different materials require different fittings. Always select screws and plugs specifically matched to the material.



WARNINGS

Failure to follow assembly instructions may result in a fire or electric shock hazard.



WARNINGS

Choking hazard. Keep the power cord at least 3 feet away from cribs, bassinets, and toddler beds.




CARE AND MAINTENANCE

Handle with Care: Please exercise caution during assembly and cleaning to avoid scratches or breakage.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

1

LAMPCOZY.STORE
SUPPORT@LAMPCOZY.STORE

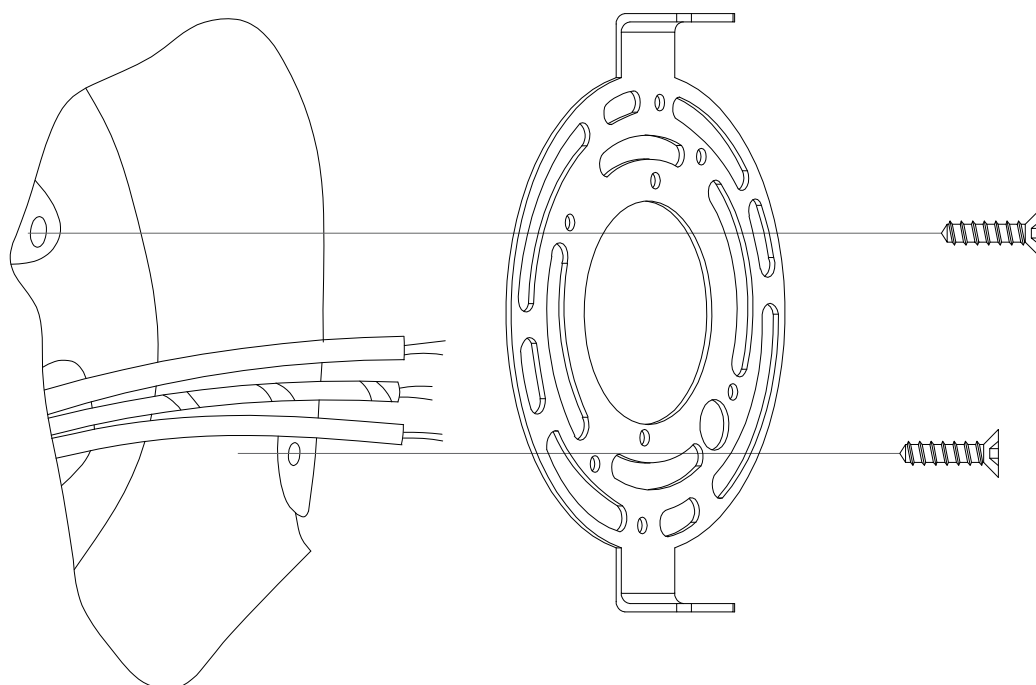

ENGLISH
ive

ENGLISH
Neutral

E

FRANCAIS
Phase


FRANCAIS
Neutral

F
Terre

ESPAÑOL
Con
corriente.

ESPAÑOL
Neutro

ESPAÑOL
Tierra

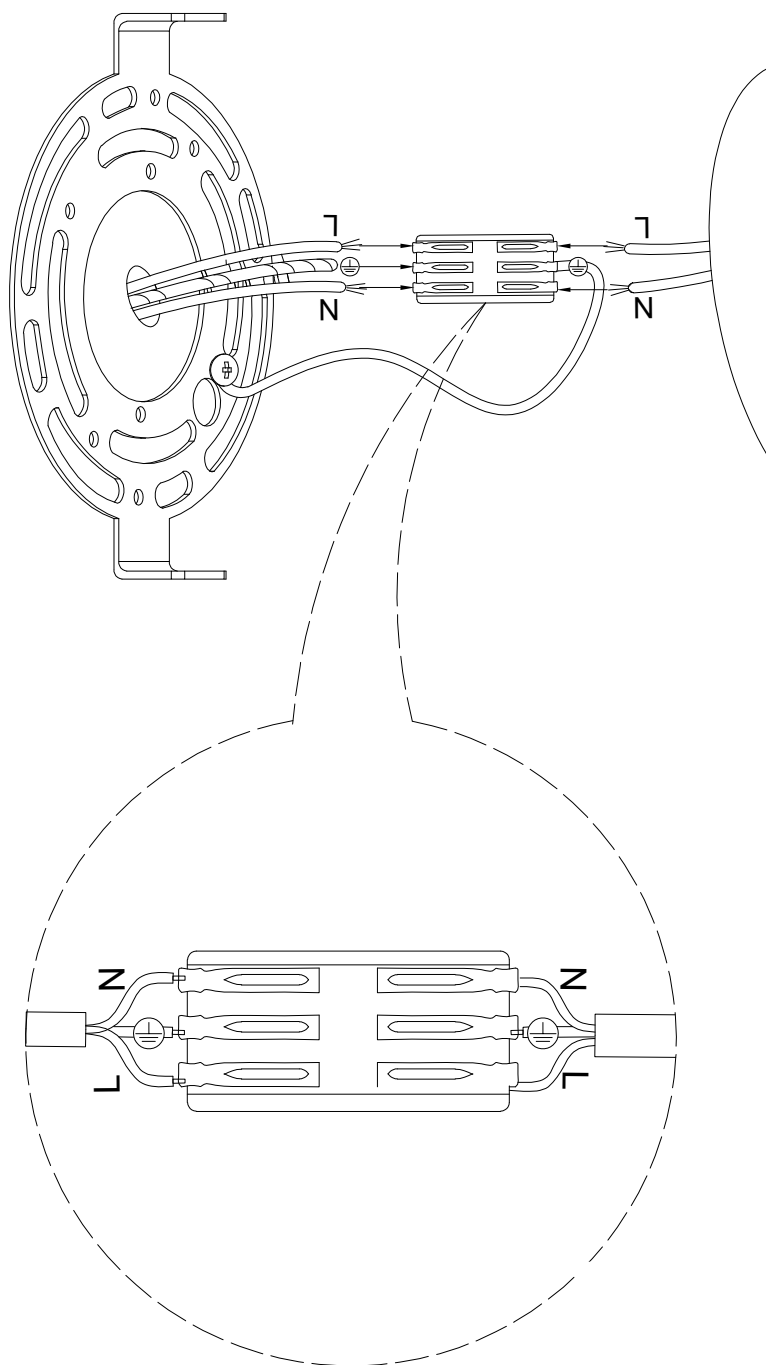

3

LAMPCOZY.STORE

SUPPORT@LAMPCOZY.STORE

