


Round Ceiling Lamp

VL-VK

-LX-260708-V1

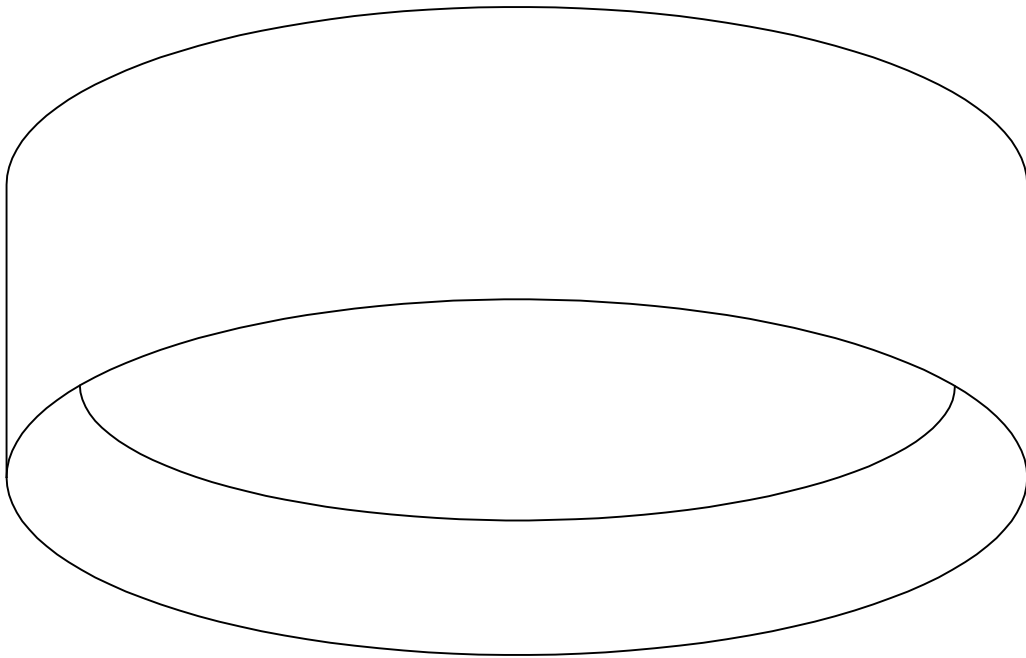

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY

Note: Turn off the power to the main circuit panel before starting.



STRUCTURAL SUPPORT REQUIREMENT

Ensure the junction box or mounting surface is independent of the drywall and rated for heavy-duty fixtures.

Secure the mounting bracket directly to a ceiling joist or a structural support member capable of supporting at least 2x the fixture weight.



WARNINGS

When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNINGS

Choking hazard. Keep the power cord at least 3 feet away from cribs, bassinets, and toddler beds.



WIRING SAFETY NOTES

When connecting wires, please follow the standard color coding: black to black (live), white to white (neutral), and green/bare copper wire to ground.

RECOMMENDED


Please refer to the rated power at the lamp head, and do not exceed the recommended wattage to avoid fire hazards. When checking the circuit connections, the curtains need to be removed




CARE AND MAINTENANCE

Handle with Care: Please exercise caution during assembly and cleaning to avoid scratches or breakage.

1

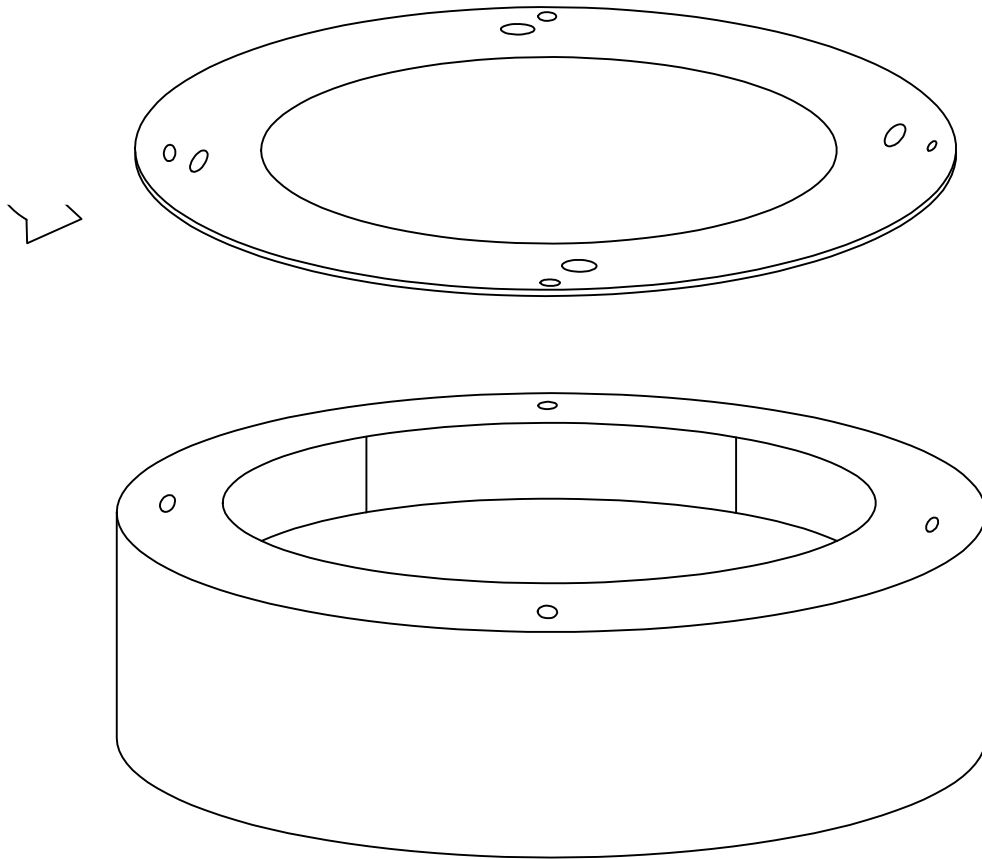

Rotate counter-clockwise to remove the mounting plate.

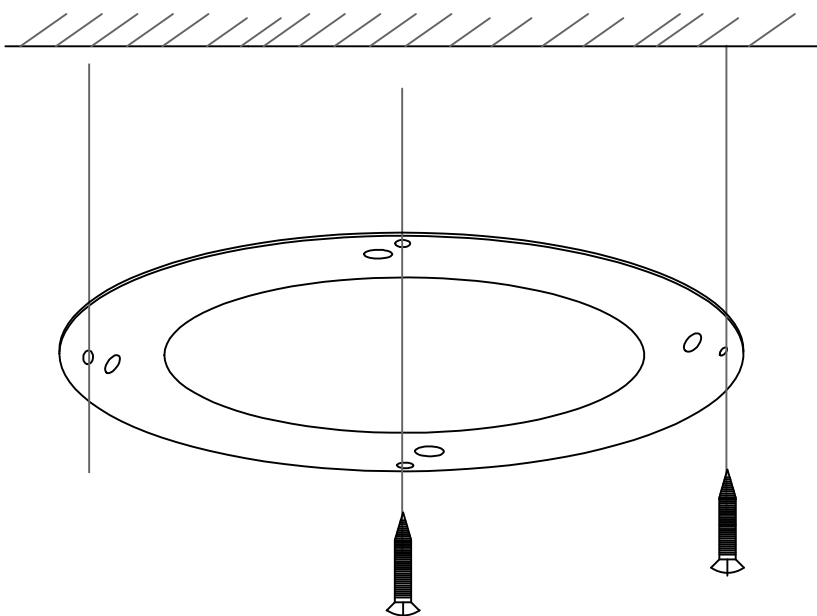

Secure the mounting plate to the ceiling with screws.

2

LAMPCOZY.STORE

SUPPORT@LAMPCOZY.STORE



ENGLISH
Live

ENGLISH
Neutral

E
E

FRANCAIS
Phase


 


FRANCAIS
Neutral

F
Terre

ESPAÑOL
Con
corriente.

ESPAÑOL
Neutro

i

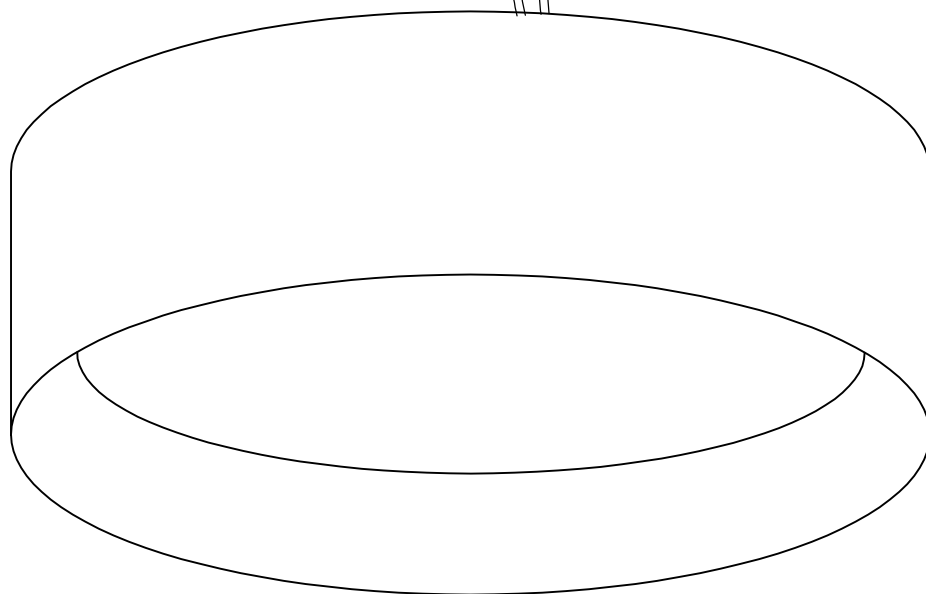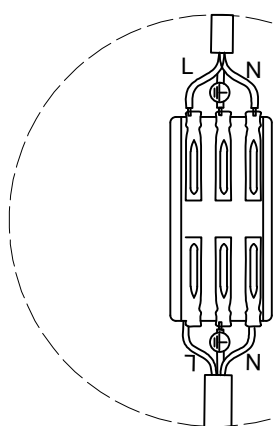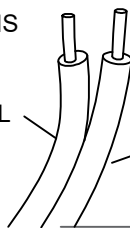


The power cord of the light fixture and the external power cord are connected via a terminal block.

3

LAMPCOZY.STORE

SUPPORT@LAMPCOZY.STORE

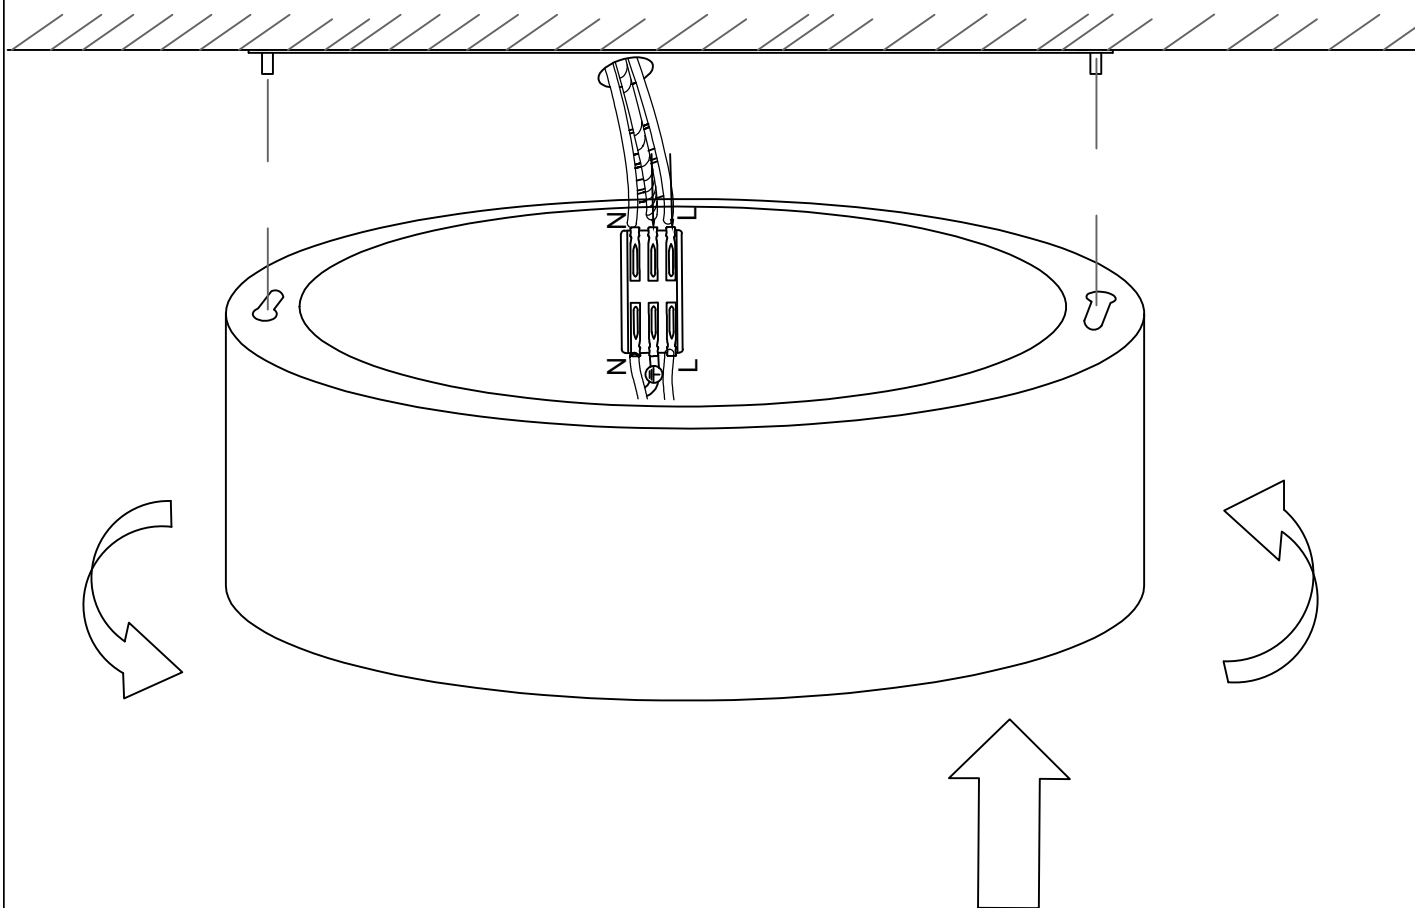

Align the mounting holes on the light fixture with the raised tabs on the ceiling bracket, push the fixture up to engage it, and rotate the fixture clockwise.